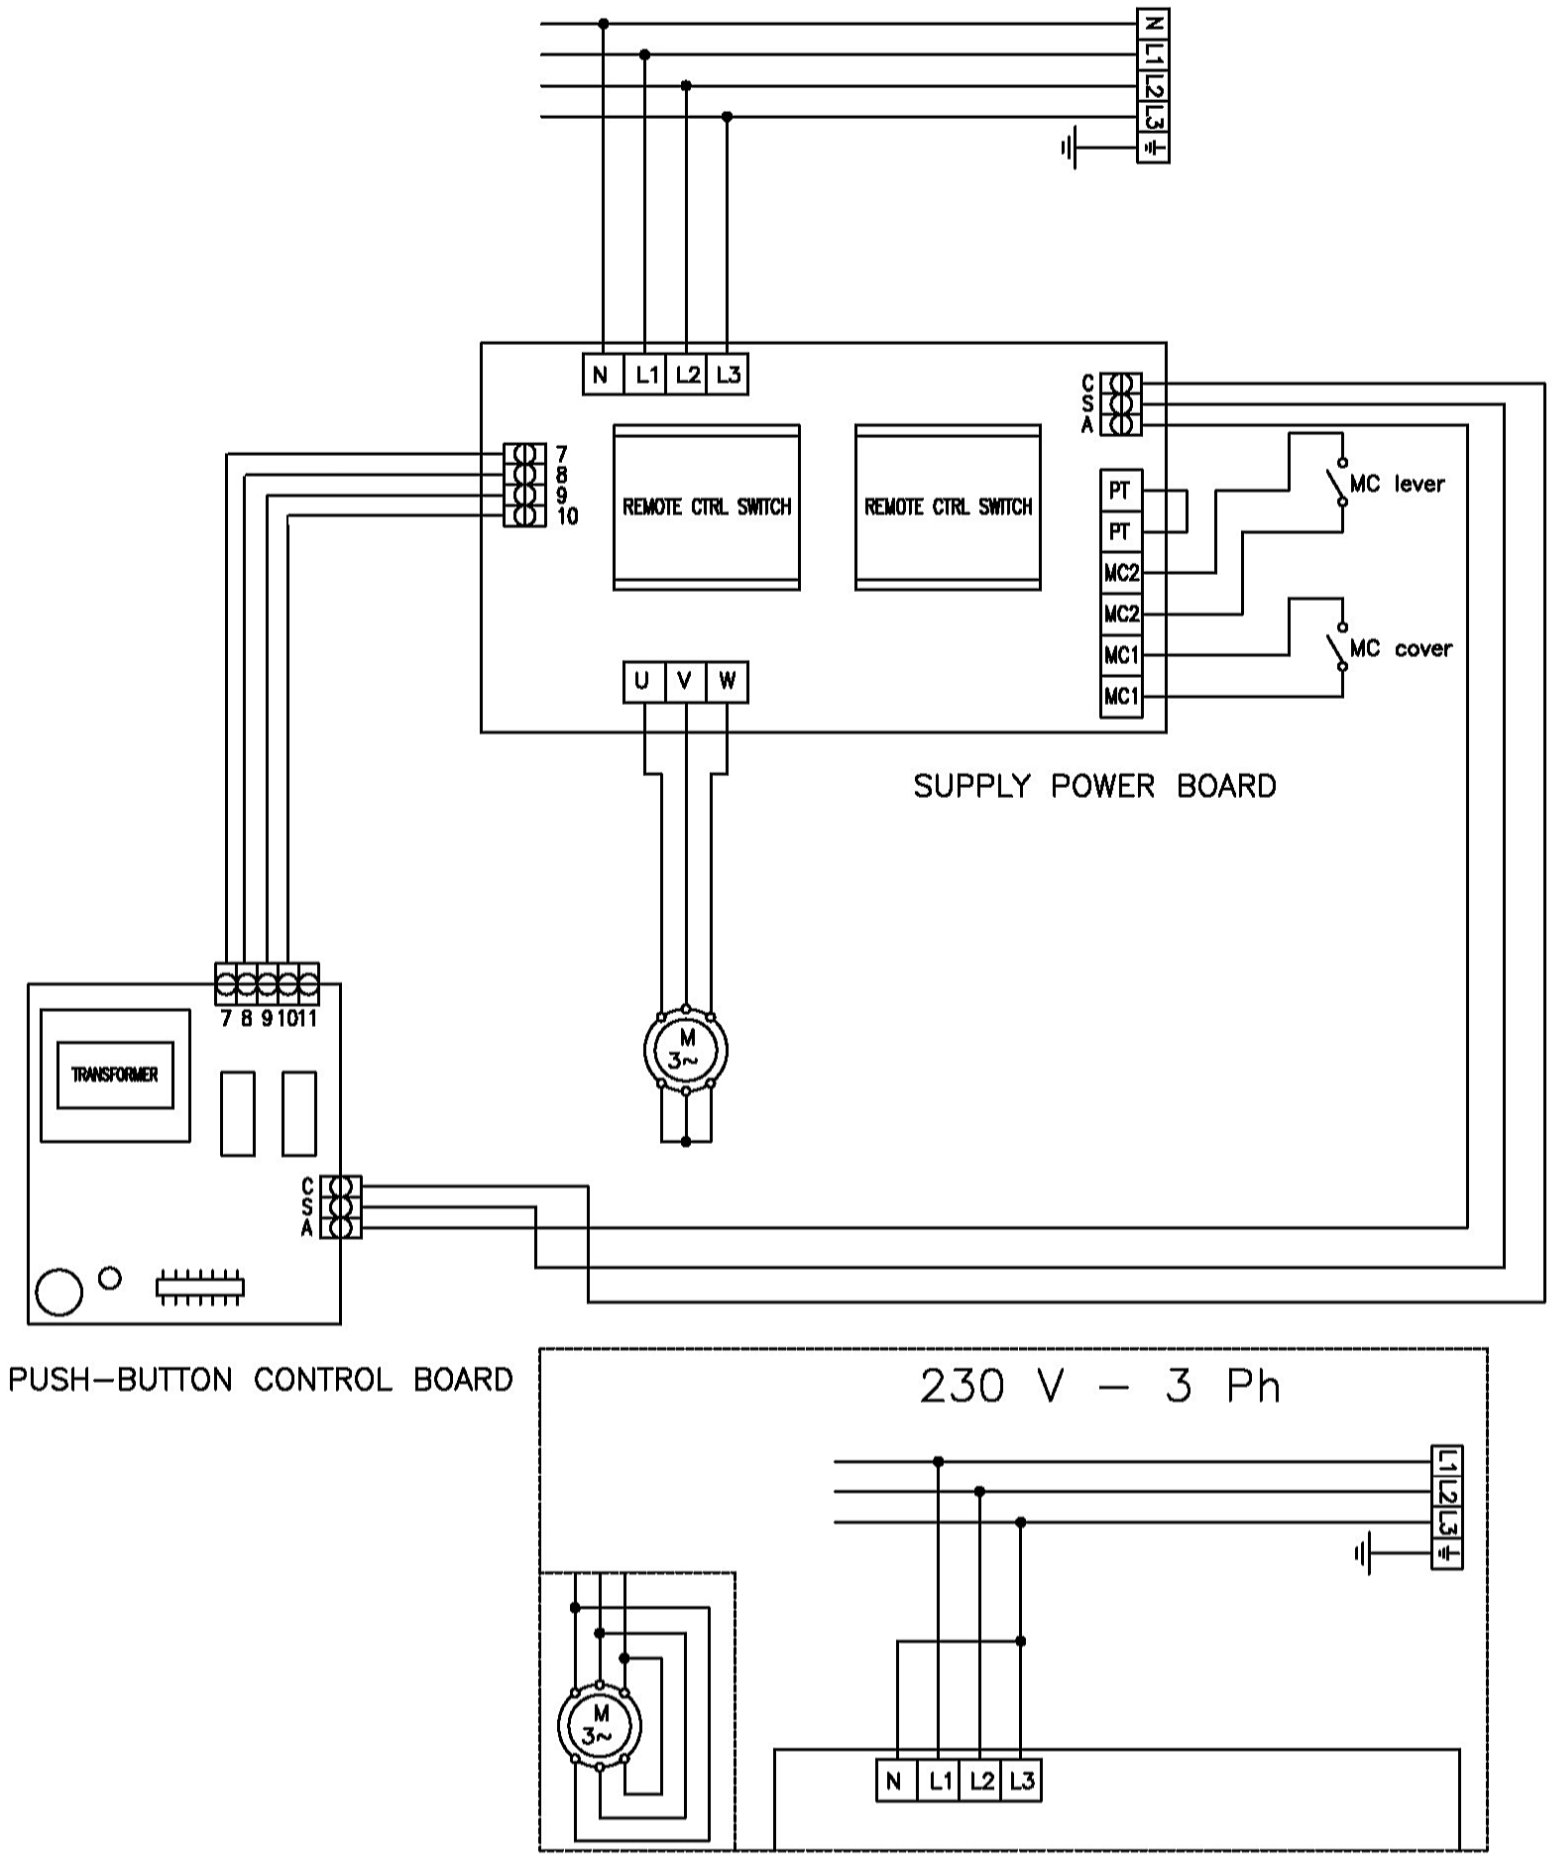

N
L1
L2
L3
N L1 L2 L3
7
8
9
10
REMOTE CTRL SWITCH
REMOTE CTRL SWITCH
C
S
A
PT
PT
MC2
MC2
MC1
MC1
MC lever
MC cover
U V W
SUPPLY POWER BOARD
7 8 9 10 11
TRANSFORMER
M
3~
C
S
A
PUSH-BUTTON CONTROL BOARD
230 V – 3 Ph
L1
L2
L3
N L1 L2 L3
M
3~