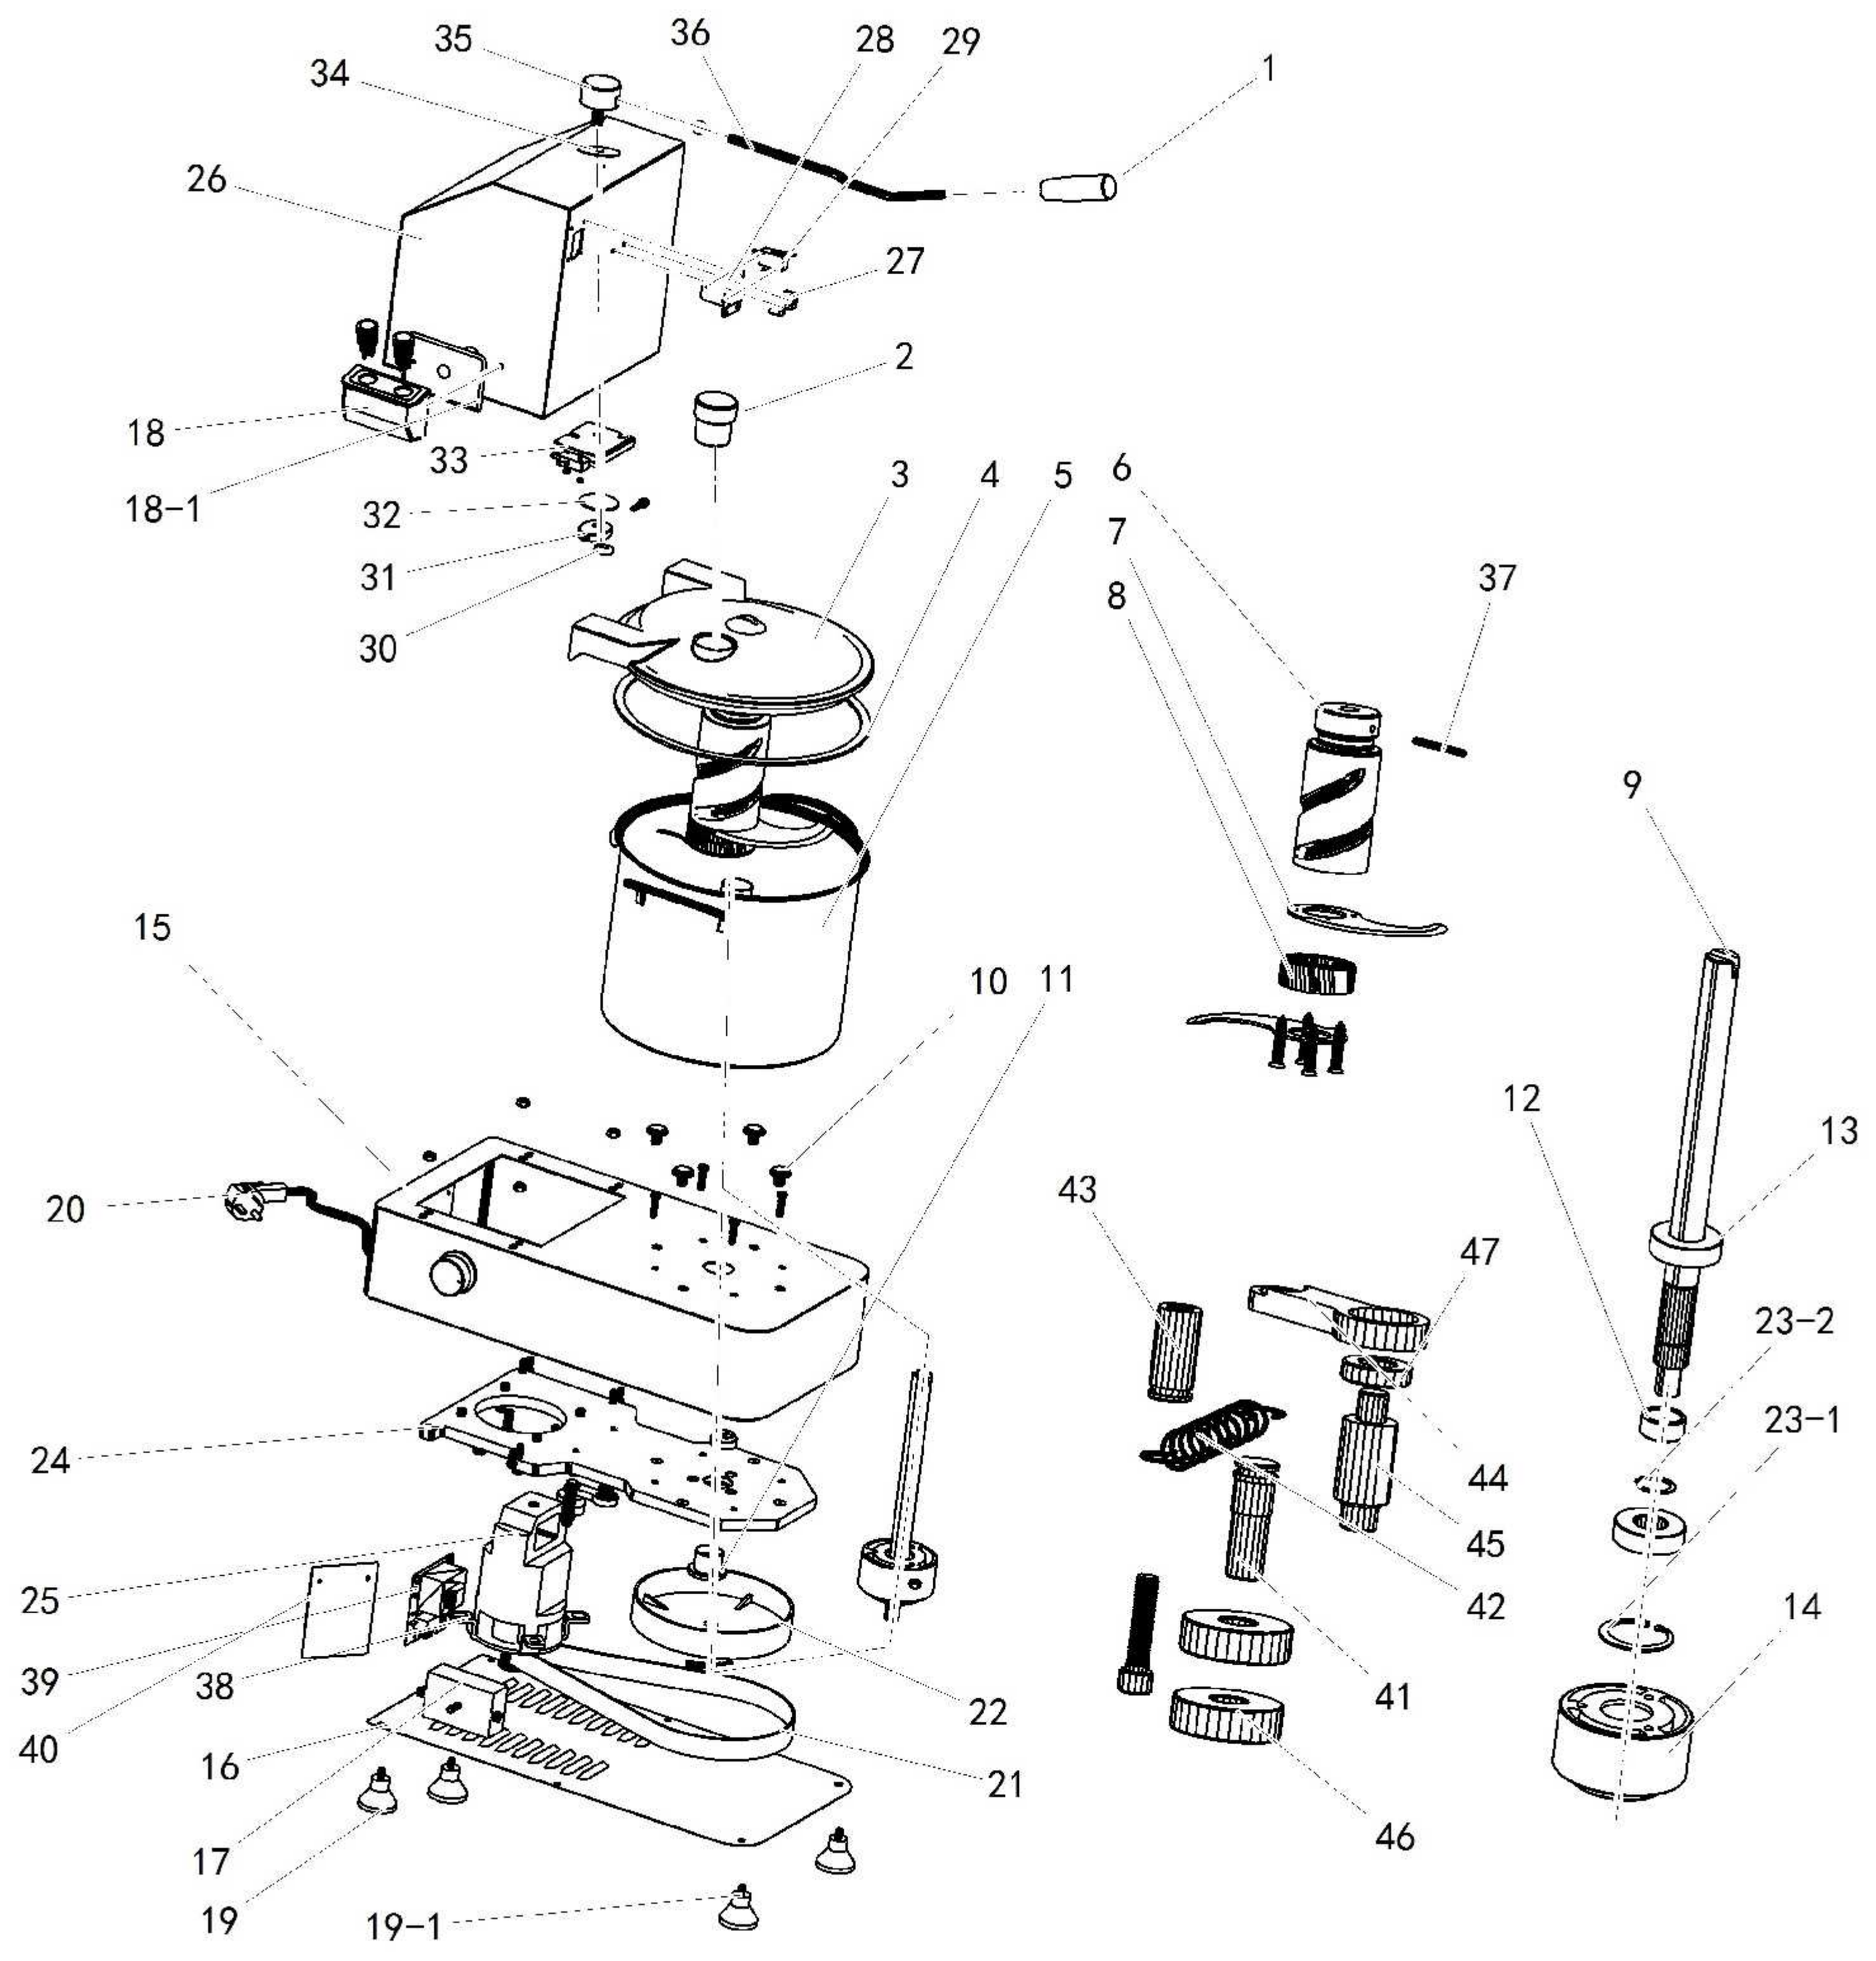

35
36
28
29
34
1
26
27
2
18
33
18-1
32
31
30
3
4
5
6
7
8
37
9
15
10
11
12
13
20
43
47
23-2
23-1
24
44
45
42
25
39
38
41
14
40
22
16
21
17
46
19
19-1

spare parts list

№	Описание	№	Описание
1	handle	26	welding
2	chuck plug	27	Limited block
3	PC cover	28	Front switch holder
4	Water-proof gasket	29	Sure model switch
5	container	30	Big nut
6	Up tool apron	31	cam
7	Rotate knives	32	Big gasket
8	Down tool apron	33	Up switch holder
9	blade shaft	34	Nylon gasket
10	Rubber gasket	35	Handle seat
11	Locating sleeve	36	Compression bar
12	Spacer bush	37	dowel
13	bearing	38	Motor holder
14	blade shaft	18-1	Seal bar
15	Base seat component	19-1	Rubber feet
16	Base board	25-1	Motor belt wheel
17	Knob for controlling speed	39	Circuit board
18	Switch box	40	Installation board of circuit board
19	feet	41	Tension wheel shaft
20	Power cable	42	Tension spring
21	belt	43	Small shaft
22	Big belt pulley	44	Tension wheel arm
23-1	Internal circlips Ш42	45	Wheel shaft 2
23-2	External circlips Ш20	46	Bearing 6200
24	Main board	47	Bearing 6800
25	motor		