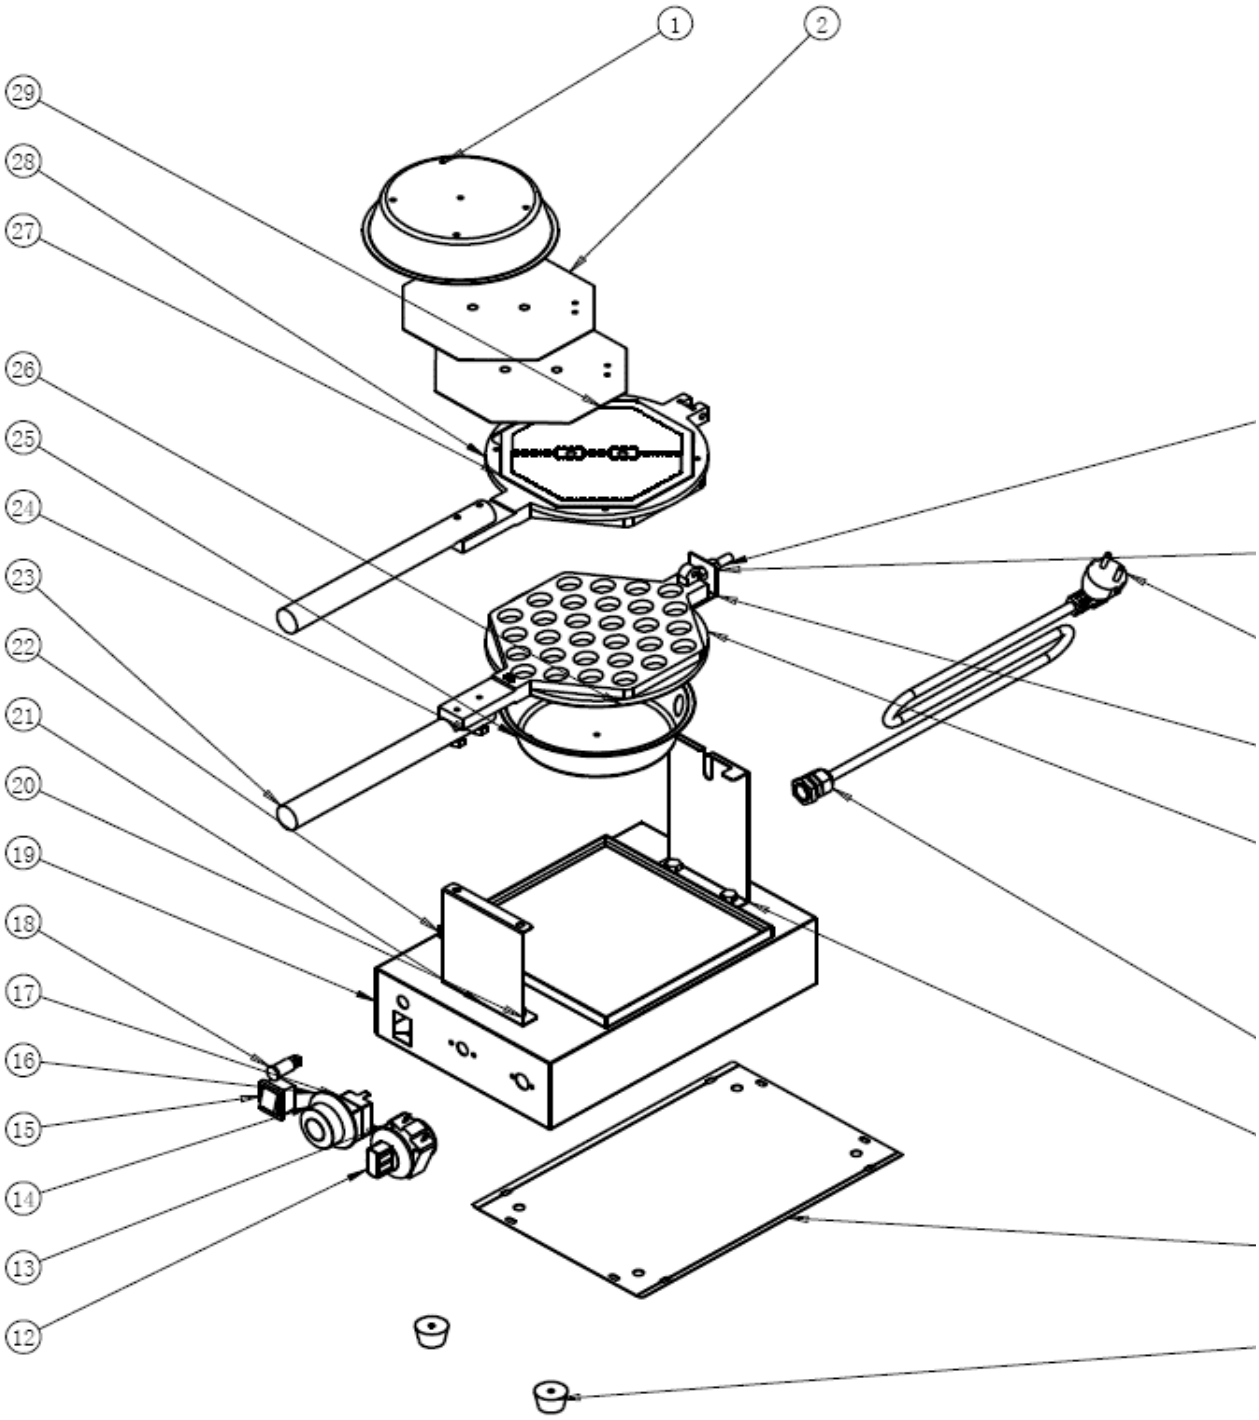

1
2
29
28
27
26
25
24
23
22
21
20
19
18
17
16
15
14
13
12

| Item No. | Description |
|---|---|
| 1 | Top cover |
| 2 | Heating Plate |
| 3 | M8x35 screw |
| 4 | M8 nut |
| 5 | GS power plug |
| 6 | Connector |
| 7 | Egg grill plate |
| 10 | Bottom cover plate |
| 11 | Rubber |
| 12 | Timing Knob |
| 13 | Timer |
| 14&16 | Temperature knob |
| 15 | Switch |
| 17 | Temperature controller |
| 18 | Working indicator light |
| 19 | Control panel |
| 20 | M8x10 screw |
| 21 | Front fixing plate |
| 22 | Plate |
| 23 | Wood handle |
| 24 | M8x20 screw |
| 25 | Cover |
| 26 &27 | Heating plate |
| 27 | Upper grill plate |

