Cleaning instructions

DAILY


- mixing cup
- brewer
- waste bin
- drip tray
- outer surface

WEEKLY

- canisters
- bean container
- grinder outlet
- fan
- inside

scan the QR code for more information

Daily cleaning - mixing cup

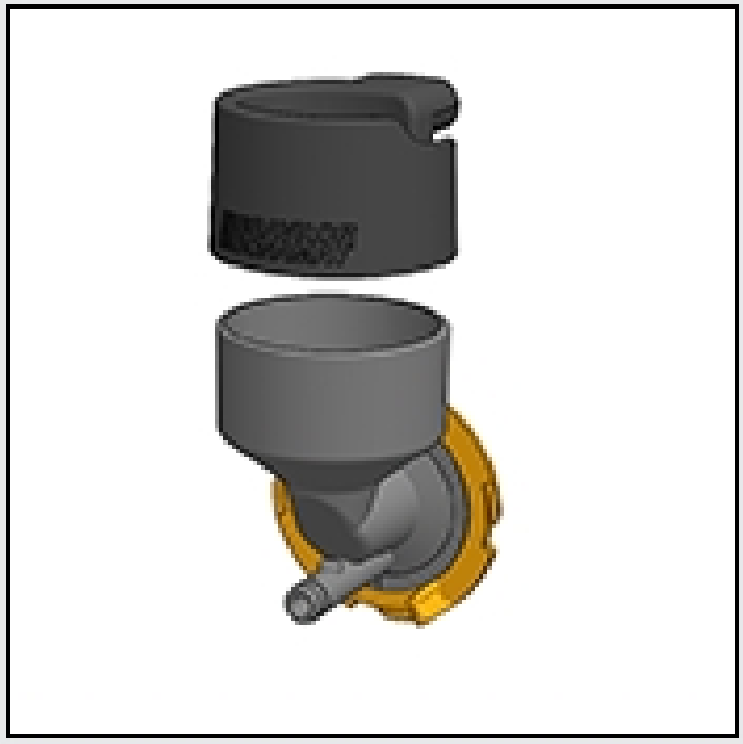

- Remove the mixing cup
- Clean the loose parts with warm water and soap (dishwasher-safe)
- Put everything back in place correctly
- Check all connections
- Activate 'rinse machine'

Daily cleaning - brewer




- Remove the brewer
- Clean the loose parts with warm water and soap (NOT dishwasher-safe)
- Put everything back in place correctly
- Check all connections
- Activate 'rinse machine'

Daily cleaning - waste bin



- Clean the waste bin with warm water and soap (NOT dishwasher safe)
- Dry

Daily cleaning - drip tray

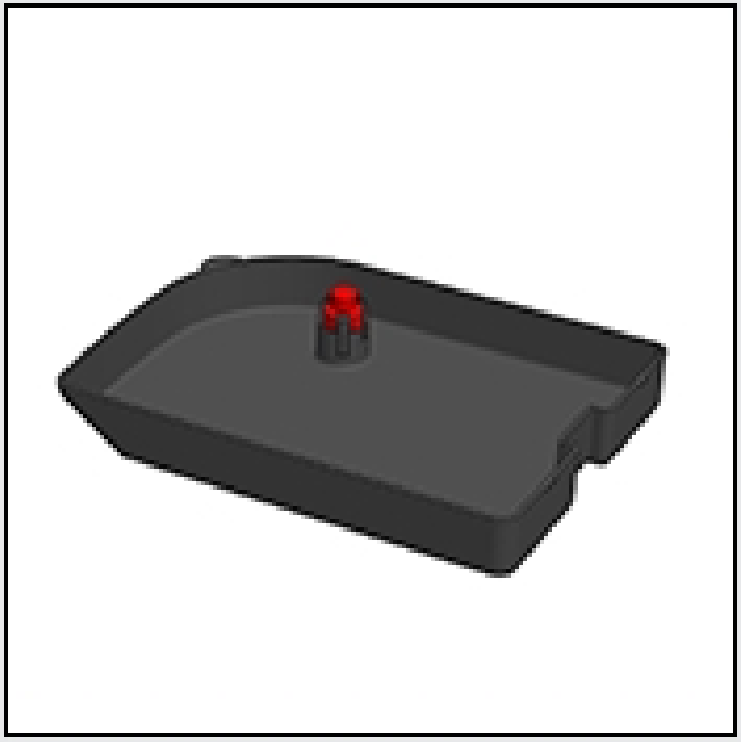


- Clean the drip tray with warm water and soap (NOT dishwasher-safe)
- Check the float

Daily cleaning - outer surface




- Turn the machine off
- Clean the outside of the machine and the drip tray plate with a damp cloth

Weekly cleaning - canisters

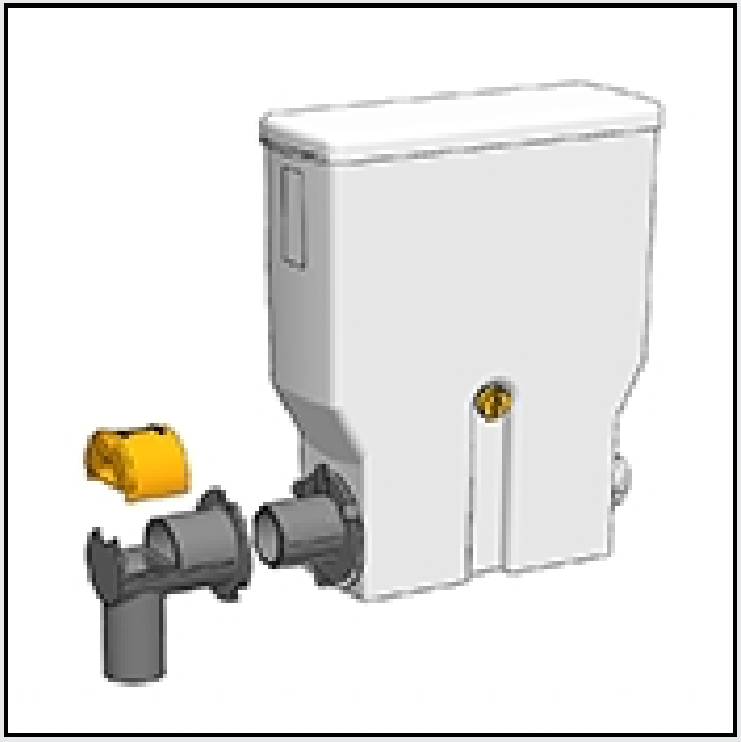


- Connect the yellow slider
- Remove and empty the canister
- Disassemble the outlet
- Clean the loose parts DRY, with a brush
- Put everything back in place correctly
- Open the yellow slider
- Activate 'rinse machine'

Weekly cleaning - bean container

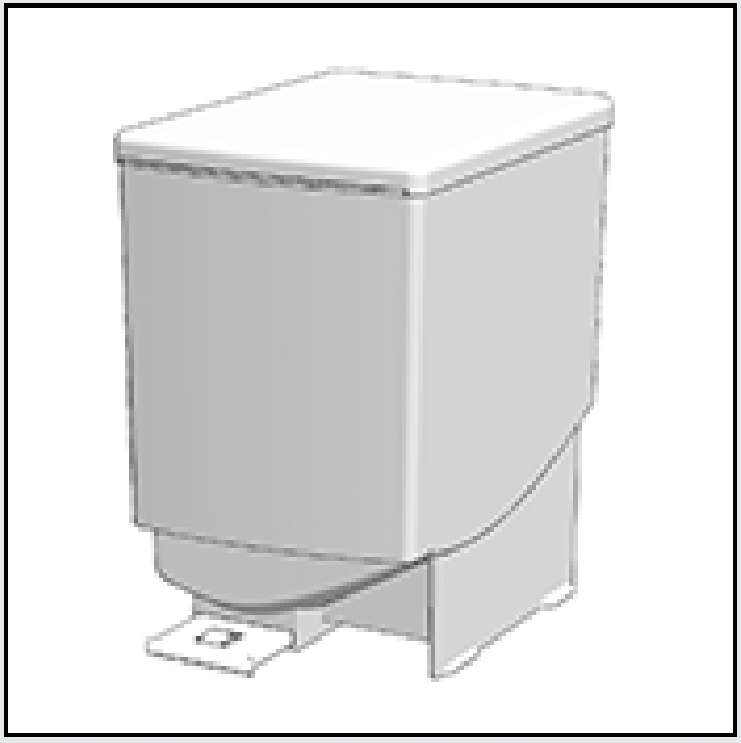


- Remove the bean container
- Empty the bean container
- Clean the bean container
(NOT dishwasher-safe)
- Dry thoroughly

Weekly cleaning - grinder outlet

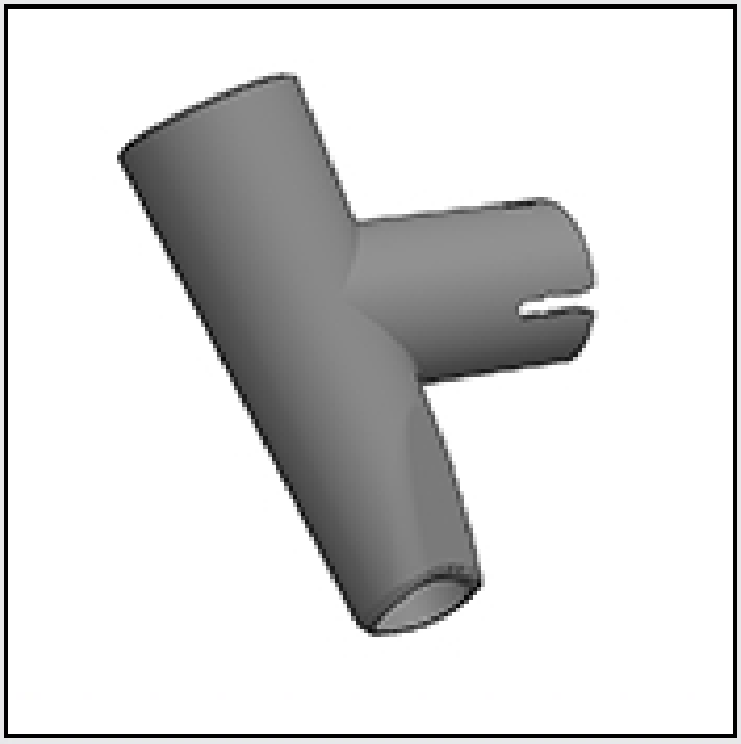


- Remove the grinder outlet
- Clean the part with hot water and soap (NOT dishwasher safe)
- Dry thoroughly

Weekly cleaning - ventilator

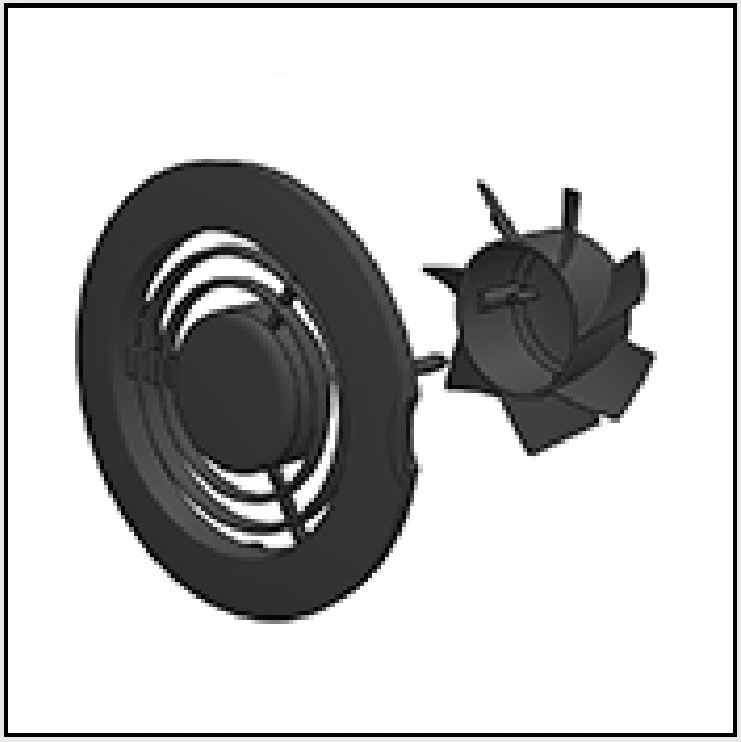

- Turn the machine off
- Clean the rotor with warm water and soap (NOT dishwasher-safe)
- Clean the ventilator housing with a brush or a damp cloth
- Put everything back in place correctly

Clean weekly - interior

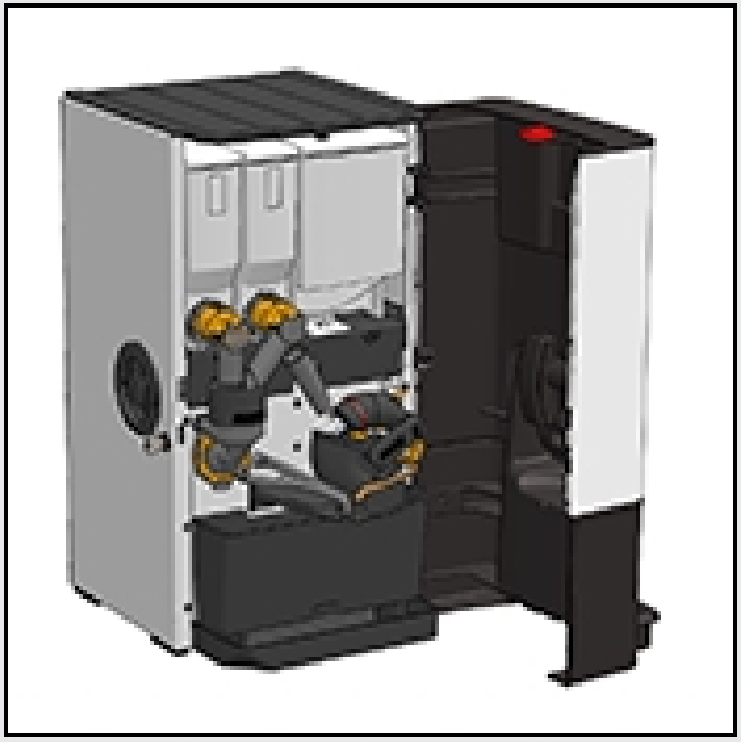

- Remove the canister and bean container
- Remove the drip tray and the waste bin
- Clean the inside of the machine with a damp cloth